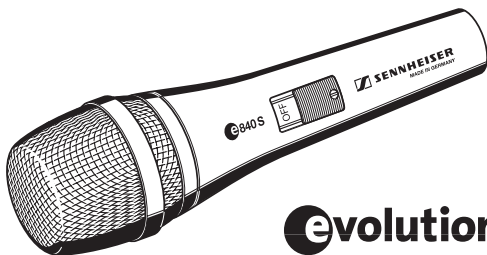
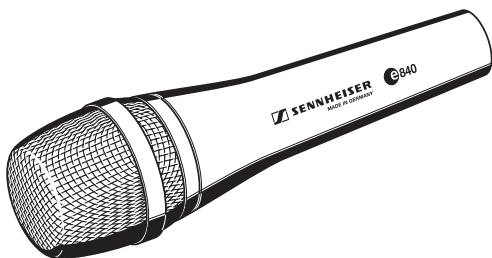


e840**e840**

Bedienungsanleitung
Instructions for use
Notice d'emploi
Istruzioni per l'uso
Instrucciones para el uso
Gebruiksaanwijzing

**evolution**

Bedienungsanleitung.....	3
Instructions for use	11
Notice d'emploi	19
Istruzioni per l'uso.....	27
Instrucciones para el uso.....	35
Gebruiksaanwijzing.....	43

☉840 / ☉840 S

The ☉840 has been engineered for the vocalist that needs the vocals to cut through the band. Due to its excellent acoustic properties, the ☉840 delivers a high signal output to cut through high on-stage sound levels with ease. A gentle presence boost to even tonal response ensures vocal clarity and projection.

The balanced frequency response maintains signal quality when moving on and off axis during performance. The minimal proximity effect provides for consistently clear bass-end performance when singing closer to, or further from the microphone.

The cardioid pick-up pattern provides excellent feedback rejection and good isolation from incidental rear noise. The rugged metal construction and internal damping isolates handling noise.

The ☉840 S variant features a silent ON/OFF switch.

Features

- Rugged metal body
- Shock-mounted capsule
- Frequency-independent directivity
- Exceptional feedback rejection
- Excellent vocal projection
- Humbucking coil


Delivery includes

- 840 / 840 S microphone
- MZQ 800 microphone clamp
- Pouch
- Instructions for use
- Warranty Certificate


ON/OFF switch (840 S only)

Use the screw to lock the switch in the ON position. With the switch set in the ON position, gently turn the screw head 90° to lock the switch in position.


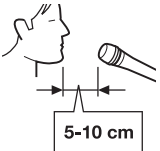
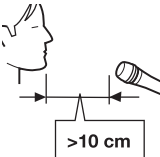
Pin assignment of XLR-3 connector

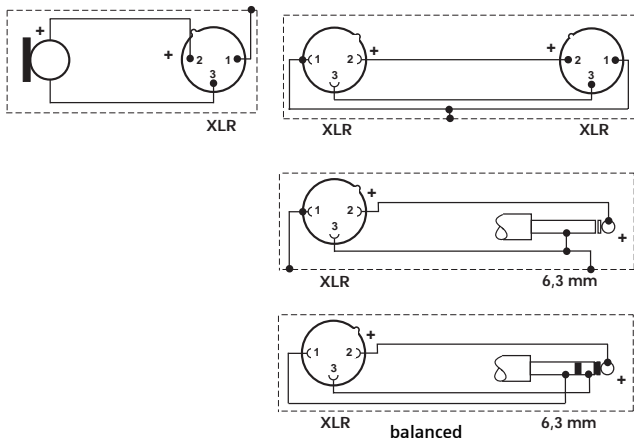

Removing the sound inlet basket

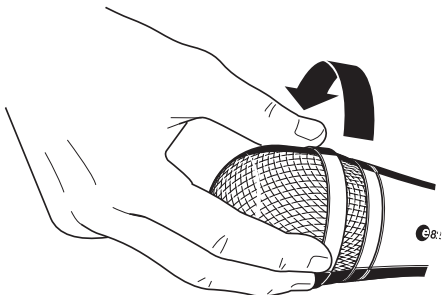


Positioning the microphone

Position	Resulting sound	Commentary
	High proximity effect (much bass/ fundamental) Powerful, direct sound	Very little crosstalk from other sound sources
	Less proximity effect (less bass/ fundamental) Some room ambience, natural, balanced sound	More crosstalk from other sound sources
	Very little proximity effect (little bass/ fundamental) More room ambience, indirect sound	Much crosstalk from other sound sources


If sibilance or “popping” occurs, position the microphone not directly in front of the mouth but slightly to the side. In order to prevent feedback, position monitor loudspeakers so that they are located in the angle area of the highest cancellation of the microphone.

In order to prevent interference due to crosstalk between adjacent sound sources, try to position the microphone so that the interfering sound source is located in the angle area of the highest cancellation of the microphone (approx. 150° ; see polar diagram).

Polar diagram

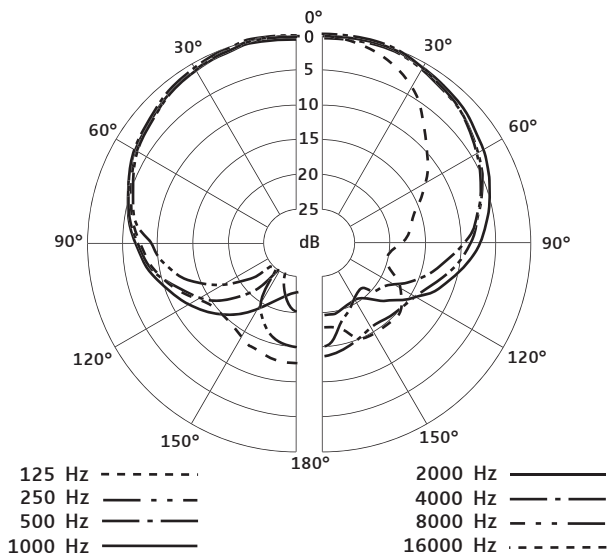

Frequency response curve

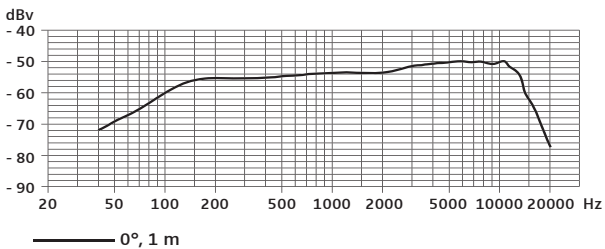

Specifications

Transducer principle	dynamic
Frequency response	40.....18,000 Hz
Pick-up pattern	cardioid
Sensitivity (free field, no load at 1 kHz)	2 mV/Pa \pm 3 dB
Nominal impedance	350 Ω
Min. terminating impedance	1 k Ω
Connector	XLR-3
Weight	330 g
Dimensions	\emptyset 47 x L 181 mm

Overview of microphone applications

Application	Variant										
	e602	e604	e606	e608	e614	e815	e825	e835	e840	e845	e865
Vocals						x	x	x	x	x	x
Choirs					x						
Studio, acoustic instruments					x						
Orchestra					x						
Brass / Saxophone	x	x		x							
Acoustic guitar					x						
Acoustic bass					x						
Guitar amplifiers			x								
Bass amplifiers	x										
Leslie	x	x	x								
Piano, grand piano					x						
Kick drums	x										
Snare drums		x	x	x							
Rack toms		x	x	x							
Floor toms	x	x	x								
Congas		x	x	x							
Cymbals					x						
Percussion		x	x	x	x						
Overheads					x						



Konformitätserklärung

Sennheiser electronic GmbH & Co. KG erklären, dass dieses Gerät die anwendbaren CE-Normen und Vorschriften erfüllt.

Approval

Sennheiser electronic GmbH & Co. KG declare that this device is in compliance with the applicable CE standards and regulations.

Certification

Sennheiser electronic GmbH & Co. KG déclarons que cet appareil est en conformité avec les normes CE.

Certificazione

Sennheiser electronic GmbH & Co. KG dichiara che questo apparecchio risponde alle normative e alle prescrizioni CE applicabili.

Autorizacion

Sennheiser electronic GmbH & Co. KG declara que este aparato cumple las normas y directrices de la CE aplicables.

Vergunning

Sennheiser electronic GmbH & Co. KG verklaren, dat dit toestel voldoet aan de toepasselijke CE-normen en voorschriften.

Diese Service-Nummer gilt nur für Deutschland




K.I.S.S.

Kunden-Information-System-Sennheiser

0180 / 5221 539

0,12 € je Minute

Montag -Freitag: 8.00 Uhr - 18.00 Uhr



Sennheiser electronic GmbH & Co. KG
30900 Wedemark, Germany
Phone +49 (5130) 600 0
Fax +49 (5130) 600 300
www.sennheiser.com

Printed in Germany

Publ. 09/04

511659/A01